FlexCare

900 series

Rechargeable
sonic toothbrush

ソニッケアー FlexCare 900シリーズ 音波式電動歯ブラシ

取 扱 説 明 書

保証書付

保証書は、この取扱説明書の裏側についておりますのでお買い求めの際に記入を受けてください。

PHILIPS
sonicare
the **sonic** toothbrush

商品のご確認

ソニッケアー FlexCare 900シリーズをお買いあげいただき、誠にありがとうございます。長い間ご愛用いただくために、ご使用前にこの取扱説明書をよくお読みの上、正しくお使いください。

また、お読みになった後は、お使いになる方がいつでも見られるところに必ず保管してください。

*改良のため、仕様を予告なく変更することがあります。

目　次

●はじめに　商品のご確認 ……1
目次 ……2
必ずお守りください ……3・4
各部の名称 ……5
識別用カラーリングの交換方法
ブラシヘッドをハンドルに取り付ける方法 ……6
携帯用小型充電器にコードを収納する方法
充電の仕方 ……7
各国の電圧 ……8
●ご使用方法　ソニッケアーの機能 ……9・10
使い方 ……11・12
上手なみがき方 ……13
パーソナル設定 ……14
本体および充電器のお手入れの仕方 ……15
●廃棄するとき　リチウムイオン電池のリサイクルについて ……16
●困ったとき　故障かな?と思ったら ……17・18
●英文解説　Guidance in English ……19～27
●保　証　保証とアフターサービス ……28
仕様 ……29
無料修理規定 ……30
保証書 ……最終ページ

必ずお守りください

製品をご使用の前に必ず取扱説明書をよくお読みのうえ、正しくお使いください。また、取扱説明書は大切に保管してください。

安全上のご注意

●ここに示した注意事項は、安全に関する重要な内容ですので、必ず守ってください。
●誤った取扱をしたときに想定される内容を「警告」と「注意」とに区分けしています。

○絵表示について

⚠ 警告	人が死亡または重傷を負う可能性が想定される内容。
⚠ 注意	人が傷害を負う可能性及び物的損害のみの発生が想定される内容。

○絵表示の例

・記号は、「危険、警告、注意」を示します。図の中や近くに具体的な注意内容（左図の場合は高温注意）を示します。

・記号は、してはいけない「禁止」を示します。図の中や近くに具体的な禁止内容（左図の場合は分解禁止）を示します。

・記号は、必ずしていただく「強制」を示します。図の中や近くに具体的な強制内容（左図の場合は電源プラグをコンセントから抜くこと）を示します。

⚠ 警告

●製品を廃棄するとき以外は絶対に分解しないでください。また、修理技術者以外の人は、分解したり修理をしないでください。火災、感電、けがの原因となります。修理はお買い上げの販売店またはソニックケアーコール（0120-418-608）にご相談ください。

●お手入れの際は必ず電源プラグをコンセントから抜いてください。再度コンセントを差し込む際には、充電器が濡れていないことを確認してください。また、濡れている手で抜き差ししないでください。感電やけがをすることがあります。

●電源コードや電源プラグが傷んだり、コンセントの差込みが緩いときは使用しないでください。感電・ショート・発火の原因になります。

●電源コードを傷付けたり、無理に曲げたり、引っ張ったり、ねじったり、たばねたり、重い物を載せたり、挟み込んだり、加工したりしないでください。
また、電源コードを熱したものの上に置いたり、屋外で使用しないでください。電源コードが破損し、火災・感電の原因となります。

●充電器底面に表示されている電源以外は使用しないでください。火災・感電の原因となります。
FlexCareは100V-240Vの範囲で稼働するように設計されていますが、電圧互換性を保証するものではありません。スムーズにコンセントに電源プラグが装着できない場合、無理に押し込もうとしないでください。

●浴室での使用は絶対にしないでください。
感電する場合があります。

●充電器を浴室で保管しないでください。水の中に落ちた充電器には絶対に触れないでください。

●充電器を水につけたり、水をかけたりしないでください。ショート・感電のおそれがあります。

●ハンドルを充電する時は専用の充電器以外では行わないでください。

⚠ 警　告

●歯や歯ぐきに歯ブラシを強く当てたり、1ヵ所に長く当てたりしすぎないで下さい。歯や歯ぐきを傷つけることがあります。歯周病がひどい人などは歯科医師にご相談ください。

●電源プラグをコンセントから抜くときは、充電器の電源コード部を持たずに必ず先端の電源プラグを持って引き抜いてください。感電やショートして発火することがあります。

●充電時以外は、電源プラグをコンセントから抜いてください。ケガややけど、絶縁劣化による感電・漏電火災の原因になります。

●器具用プラグにピンやごみを付着させないでください。感電・ショート・発火の原因になります。

●歯ブラシのプラスチック部分を歯にあてないでください。歯や歯ぐきを傷つける原因になります。

●治療中の歯や不安定な入れ歯など口腔内に気になる症状がある場合は、その部位での使用はしないでください。けがの原因になります。

●乳幼児（乳歯）や自分で操作ができない方、口内の感覚が弱い方などは使用しないでください。

使　用　上　の　ご　注　意

1. 毛が曲がったブラシ、毛先がつぶれたブラシは、使わないようにしてください。破損した毛がブラッシング中に取れてしまうことがあります。このようなことを防ぐため、ブラシは3ヶ月ごとに新品とお取り替えください。破損の兆候が見えた場合は、速やかにお取り替えください。製品には取り替え用パーツは入っておりませんので、ソニッケアー（ハンドル、ブラシ、充電器）が正常に動作しない場合はソニッケアーコール（0120-418-608）にすみやかにご連絡ください。

2. 一般の口腔衛生用品を初めてご使用になる場合と同様、過去2ヶ月間に口腔内の治療や歯ぐきの手術を受けられた場合は、本製品をご使用になる前に、あらかじめ歯科医師にご相談ください。

3. 本製品をご使用の結果、万一激しい出血があった場合や、本製品を使い始めて1週間経過後も出血が認められる場合には、ご使用を中止し、歯科医師にご相談ください。

4. ペースメーカーをお使いの方が本製品をご使用になる場合は、あらかじめかかりつけの医師にご相談ください。また、その他健康面で不安なことがある場合も同様にご使用の前にかかりつけの医師にご相談ください。

5. 本製品は個人用衛生用品ですので、歯科医院や研究施設での複数の患者に対して使用しないでください。

6. 本製品は歯、歯ぐき、および舌の洗浄のために設計されています。本取扱説明書に記載されている以外のその他の目的では使用しないでください。本製品を適切に使用できない場合は、すみやかにご使用を中止してください。また、痛みや不快感が生じた場合はすみやかに医師にご相談ください。

7. お子様がご使用の際には、必ず監督下のもとに行ってください。

8. 炭酸ナトリウムを含む歯磨き粉をお使いの場合は使用ごとにブラシヘッドをよく水洗いしてください。中性洗剤による洗浄も効果的です。プラスチック部のひび割れが生じる危険性があります。

9. メーカーが推奨している以外の付属品は使用しないでください。

10. ブラシヘッド、充電器を食器洗浄機で洗わないでください。

各部の名称

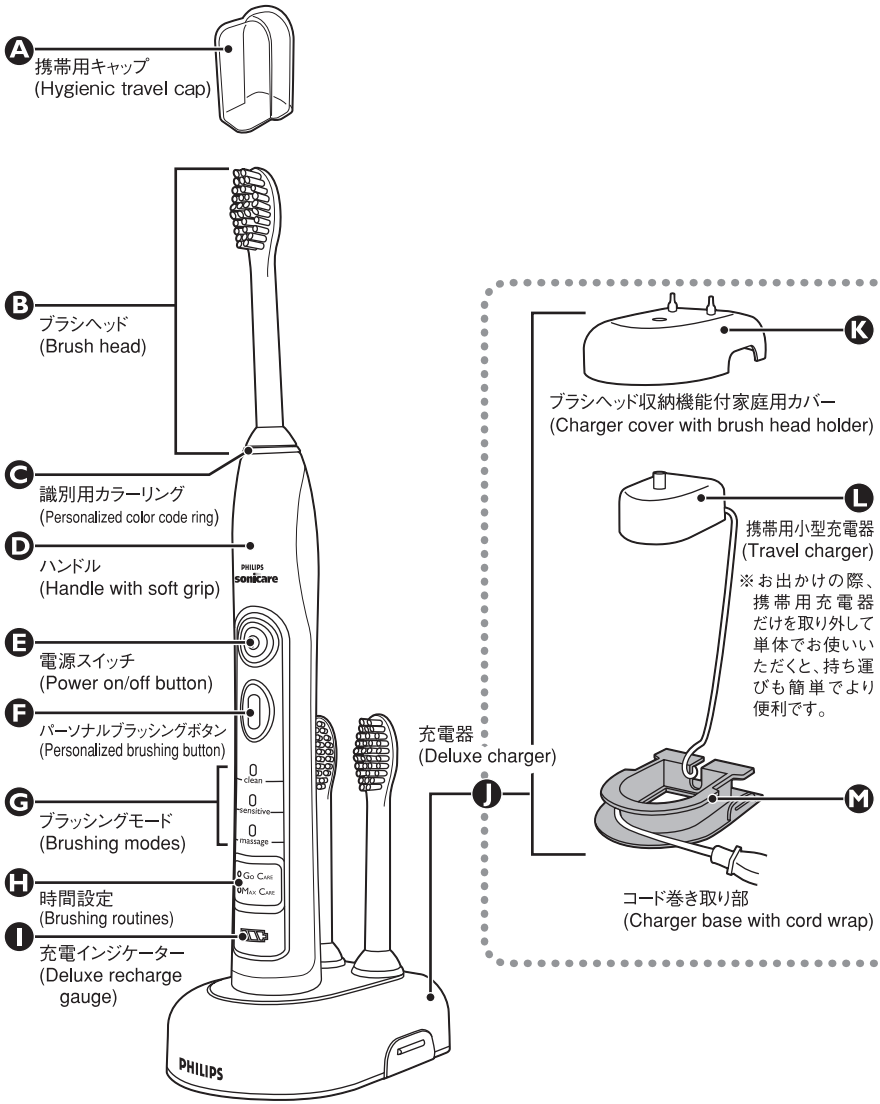
A
携帯用キャップ
(Hygienic travel cap)
B
ブラシヘッド
(Brush head)
C
識別用カラーリング
(Personalized color code ring)
D
ハンドル
(Handle with soft grip)
E
電源スイッチ
(Power on/off button)
F
パーソナルブラッシングボタン
(Personalized brushing button)
G
ブラッシングモード
(Brushing modes)
H
時間設定
(Brushing routines)
I
充電インジケーター
(Deluxe recharge gauge)
PHILIPS
sonicare
clean
sensitive
massage
GO CARE
MAX CARE
PHILIPS
充電器
(Deluxe charger)
J
K
ブラシヘッド収納機能付家庭用カバー
(Charger cover with brush head holder)
L
携帯用小型充電器
(Travel charger)
※お出かけの際、携帯用充電器だけを取り外して単体でお使いいただくと、持ち運びも簡単でより便利です。
M
コード巻き取り部
(Charger base with cord wrap)

●ソニッケアーのブラシヘッドにはご家族で区別できるように、識別用カラーリングが付いています。

識別用カラーリングの交換方法

1. ブラシヘッドの底面から識別用カラーリングを引っぱり出してください。

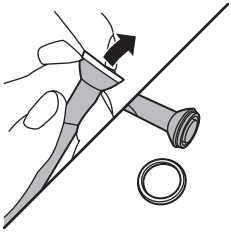

2. ブラシヘッドの底面に新しい識別用カラーリングをあてて、ヘッドのふちに滑らせるように押し込んで装着してください。

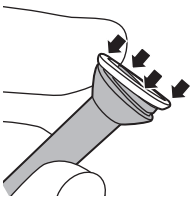

ブラシヘッドをハンドルに取り付ける方法

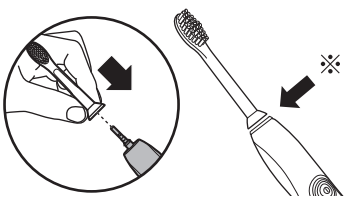

1. 毛先がハンドルの正面を向くようにブラシヘッドの向きをそろえてください。

2. ブラシヘッドが止まるまで、金属シャフトにヘッドをしっかり差し込んで固定してください。

※識別用カラーリングとハンドルの間にはわずかなすき間があります。

携帯用小型充電器にコードを収納する方法

携帯用充電器は、カバーの中に電源コードを収納することができます。

1. 充電器台の両サイドに付いている灰色の突起を押し、白色の充電器カバーを上に引っ張るようにして外してください。

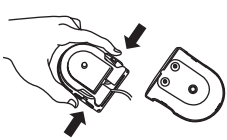

2. 余分なコードを充電器台の溝の部分に巻きつけて収納してください。

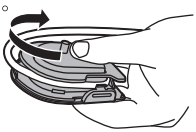

3. その後、必要なコードを充電器台の後部にある溝から出してください。

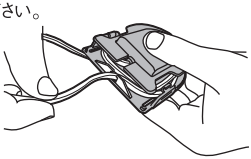

4. 充電器台にカバーをかぶせてしっかり止まるところまで押してください。これでカバーの再装着が完了です。

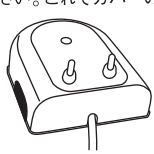

充電の仕方

ソニッケアーは充電しないと使用できません。
初めてお使いになるときや、使用中に動作が停止したときは、必ず24時間充電してください。
ソニッケアーを満充電するには最低24時間必要です。

1. 充電器の電源コードをコンセントに差し込みます。

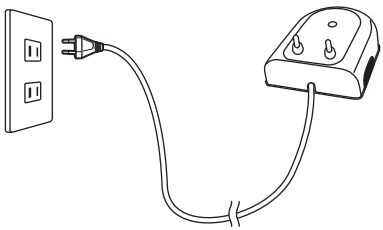

2. 充電インジケーターが見えるように、ハンドルの底面が充電器に完全に接するようにハンドルを立てます。

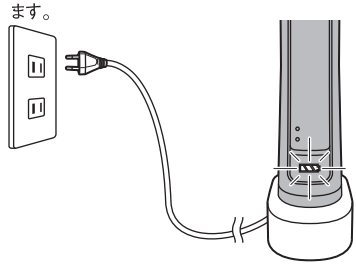

充電表示

充電催促表示

電池残量が少なくなると、ブラッシング終了時にビープ音が3回鳴り、30秒間黄色のライトが点滅します（電池残量25%未満）。

充電中

充電中はライトが点滅します。満充電したソニッケアーは、2分間のブラッシングを1日2回で約2週間使うことができます。
※途中充電器に立てることなく保管された場合

電池残量表示

点灯するランプの個数で、電池残量を示します。

●緑色のライトが3個点灯
＝電池残量　75-100%

●緑色のライトが2個点灯
＝電池残量　50-74%

●緑色のライトが1個点灯
＝電池残量　25-49%

⚠注意
- ●充電器はソニッケアー FlexCare 900シリーズ用です。他のシリーズのものはお使いになれません。
- ●充電器の上にコインやクリップを置かないでください。

※充電中は本体が多少あたたかくなりますが異常ではありません。
※満充電したソニッケアーのブラッシング回数は、時間経過による充電池の劣化に伴い減少します。

各国の電圧

海外でのご使用も可能です。ただし、アダプタや電圧など現地で充分お確かめのうえご使用ください。

1.プラグアダプタなしで使える国(地域)と電圧

No plug adaptor required.

カナダ Canada	120V	メキシコ Mexico	125V	タイ Thailand	220V
中国 China	220V	フィリピン Philippines	220V	アメリカ U.S.A	120V
グアム Guam	120V	サイパン Saipan	110V	ベネズエラ Venezuela	120V
日本 Japan	100V	台湾 Taiwan	110V		

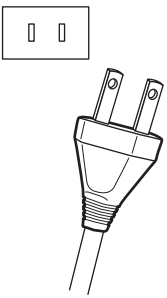

2.プラグアダプタ(C-2)を使用する国(地域)と電圧

Plug adaptor required.

オーストリア Austria	220V	フランス France	220V	オランダ Netherlands	220V
アルゼンチン Argentine	220V	ドイツ Germany	220V	ニューカレドニア New Caledonia	220V
オーストラリア Australia	240V	ギリシャ Greece	220V	ノルウェー Norway	230V
ベルギー Belgium	220V	ハンガリー Hungary	220V	ポーランド Poland	220V
ブラジル Brazil	220V	インド India	230V	南アフリカ South Africa	220V
チリ Chile	220V	インドネシア Indonesia	120V	スペイン Spain	220V
旧ソビエト連邦 C.I.S	127/220V	イラン Iran	220V	スウェーデン Sweden	220V
デンマーク Denmark	220V	イスラエル Israel	230/127V	スイス Switzerland	230V
エチオピア Ethiopia	220V	イタリア Italy	220V	チュニジア Tunisia	220V
フィンランド Finland	220V	韓国 Korea	100/220V	イギリス U.K.	220V

C-2プラグアダプタ

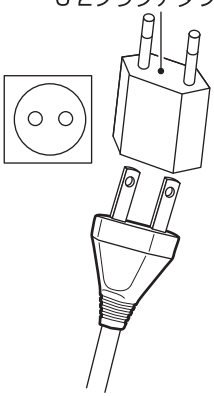

注意：プラグアダプタは別途ご購入ください。

上記はC-2プラグアダプタを使用する主な国（地域）の例です。
国によっては地域、ホテルにより電圧・プラグの形状が異なる場合がありますので、ご確認の上お使いください。

ソニッケアーの機能

イージースタート機能

イージースタートとは、ソニッケアーに慣れていただくまでの間、通常より弱いパワーでお使い頂き、段階的に上げていく機能です。初めてソニッケアーをお使い頂いてから15回目のブラッシングで通常のブラッシングパワーになります。
なお、1回のブラッシング時間が1分未満の場合、1回とカウントされない場合があります。
また、イージースタート機能は工場出荷時にオンになっています。
14回目のブラッシングまでは必ず最低1分間の歯みがきを行ってください。イージースタート機能が正常に動作しない場合があります。

【イージースタートのオンおよびオフ設定】

①ブラシヘッドをハンドルに装着してください。

②コンセントに充電器の電源コードが差し込まれているのを確認して、ハンドルを充電器に立ててください。

●イージースタート機能をオフにする。
電源スイッチを5秒間押し続けると、ビープ音が1度鳴り、イージースタート機能がオフになります。

●イージースタート機能を再びオンにする。
電源スイッチを5秒間押し続けると、ビープ音が2度鳴り、イージースタート機能が再びオンに設定されます。

※ソニッケアーの優れた歯垢除去効果が損なわれますので、慣れるための最初の準備期間を過ぎた後にイージースタート機能を使い続けることはおすすめしません。

スマートタイマー機能

スマートタイマー機能は、設定されたブラッシング時間で自動的に停止する機能です。

ブラッシング時間の設定詳細についてはP14を参照してください。

※米国の歯科専門家は1日2回各2分間以上のブラッシング時間を推奨しています。

ソニッケアーの機能

カドペーサー機能

カドペーサー機能は、時間の区切りをビープ音でお知らせする機能です。お口の中を均等にくまなくブラッシングすることができます。

一定の間隔で短いビープ音が鳴り、ブラシの振動が一瞬止まります。お口の中をイラストのように4箇所に分け、それぞれを一定の間隔で磨くことができます。それぞれのパーソナル設定によってビープ音の鳴る間隔は異なります。使い方（P11）およびパーソナル設定（P14）のページもご参照ください。

【カドペーサー機能の変更】

同製品のカドペーサー機能はオン設定になっています。カドペーサー機能の設定変更は下記のようになります。

①ブラシヘッドをハンドルに装着してください。コンセントに充電器の電源コードが差し込まれているのを確認して、ハンドルを充電器に立ててください。
②カドペーサー機能をオフにする:パーソナルブラッシングボタンを5秒間押し続けると、ビープ音が1度鳴り、カドペーサー機能がオフになります。
③カドペーサー機能をオンにする:パーソナルブラッシングボタンをビープ音が2回鳴るまで5秒間押し続けてください。

※カドペーサー機能はGoケアーおよびMaxケアーの時間設定をお使いの際にはオフ設定に変更することができません。

— 磨き方参考例 —

①上あご右側表裏
②上あご左側表裏
③下あご右側表裏
④下あご左側表裏

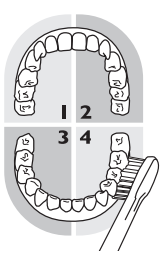

①上表側（頬側）
②上裏側（舌側）
③下表側（頬側）
④下裏側（舌側）

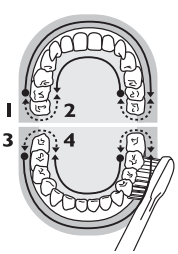

使い方

1. ブラシを取り付ける。

ブラシの毛先がハンドルの正面を向くように、ブラシを金属シャフトにまっすぐはめ込んでください。
P6（識別用カラーリングの交換方法およびブラシヘッドをハンドルに取り付ける方法）を参照してください。

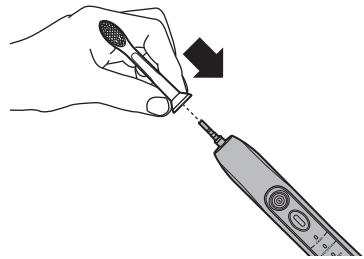

2. ブラシヘッドを数秒間水でゆすいで濡らします。

お好みにより、歯みがき粉をつけます。

※ブラシヘッドのキャップはご使用前に外してください。

3. 歯みがき粉が飛び散らないように、ブラシヘッドを口に入れてから電源スイッチを押します。

ブラシヘッドを歯と歯ぐきのさかい目に少し角度をつけて軽く当てて、ゆっくりと移動させます。長い毛が歯間に届くよう気をつけて、同じ箇所で約2秒間ずつブラッシングしてください。
※カドペーサー機能（P10を参照してください）を使うと、お口の中の上下の歯の表裏、4つのセクションをまんべんなくブラッシングできます。

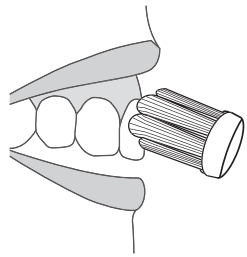

4. ブラッシングが終わったら、かみ合わせ部分や着色汚れ（ステイン）がある部位を追加でブラッシングすることも可能です。また、お好みによりパワーオンもしくはオフの状態で舌のクリーニング用にもお使いいただけます。

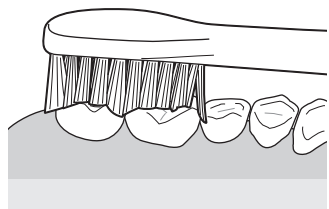

※ソニッケアーは下記の部位にも安心してお使いいただけます。
- 歯列矯正装置（ブラシヘッドの消耗が早まります）
- 歯科補綴物（詰め物、クラウン、ラミネートベニアー）

使い方

●ソニッケアーを初めてお使いいただくと、少しくすぐったい感じや、ちくちくした感じを受けることがありますが、慣れるにつれ、この感じは少なくなっていきます。
●ソニッケアーの動きに任せてください。力を入れてこすったりすると、逆効果です。

5. ブラッシングを終えると、自動的にスイッチが切れます。

さらに磨きたい場合は、もう一度スイッチを入れます。

6. ブラッシング後は、口を水でゆすぎます。

7. 使用後は、必ずブラシヘッドを水で洗ってください。
水道蛇口から水を出して、ブラシヘッドに残っている歯みがき粉を洗い流してください。

電源を入れてブラシヘッドを振動させると、よりきれいになります。

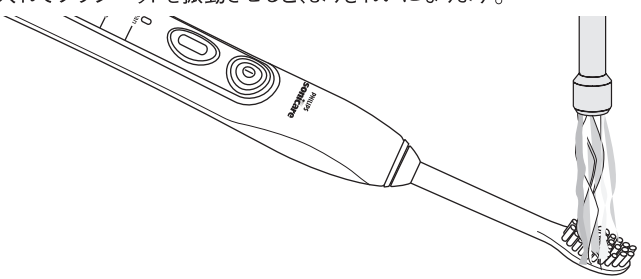

※ソニッケアーを臨床試験でご使用の際は、初期設定のクリーンモード（ブラッシング時間2分）を選択してください。満充電されているのを確認し、イージースタート機能はオフ設定にしてください。ステインが気になる時はブラッシング時間を30秒延長してください。

上手なみがき方

以下のポイントに注意していただくと、効果的なブラッシングができます。

ソニッケアーの効果的なブラッシング方法

ブラシを少し斜めにあててください。

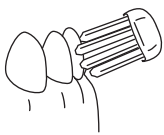

歯と歯ぐきの境目

ブラシを少し立てるようにあててください。

奥歯の奥

かみ合わせ面に対して垂直にあててください。



かみ合わせ

ブラシをたてにあててください。

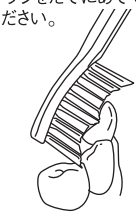

前歯の裏（タテにあてる）

ブラシを歯の表面に少し斜めにあててください。

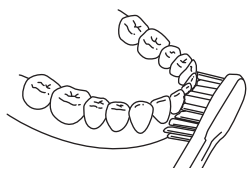

歯の表面

ブラシを歯の表面に少し斜めにあててください。

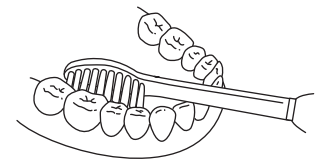

奥歯の裏側

ヒント

- 歯みがき粉をお使いになる場合、飛び散るのを防ぐためブラシヘッドを口腔内に入れてから電源を入れてください。
- ソニッケアーの性能を最大限引き出すために、ブラシヘッドを歯に軽く当ててブラッシングしてください。
- カドペーサー機能を利用するとお口の中を均等にくまなくブラッシングできます。
- ソニッケアーをはじめてお使いいただく方は、慣れるまでくすぐったく感じることがあります。慣れるとともにこの感覚は減少します。
- お好みによって舌のブラッシングにもお使いいただけます。

このような場合

●歯列矯正装置をつけている方

歯と歯列矯正装置の間に、ブラシの毛先を少し斜めに当てるようにしてみがきます。
歯と矯正装置の間にブラシの毛先を無理に押し込まないでください。

●治療後の歯科補綴物

詰め物、クラウン、ラミネートベニアー等の歯科補綴物にも安心してご使用いただけますが、何か異常を感じた場合、歯科医師にご相談ください。

ソニックケアーFlexCare 900シリーズには、ブラッシングの仕方を選べるパーソナル設定機能があります。お好みに合わせて、下記のようにモード設定を変更してください。
●初期設定は、常に**クリーンモード**になっています。

パーソナル設定

パーソナル設定の切り替え

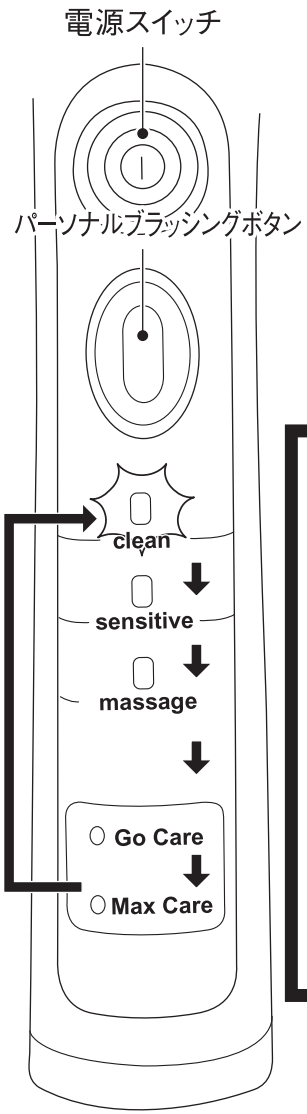

ソニックケアーの電源をオンにする前にパーソナルブラッシングボタンを押して、設定を切り替えてください。
1回ボタンを押すごとに、時間設定（Goケアー → Maxケアー）からブラッシングモード（クリーンモード → センシティブモード → マッサージモード）に1つずつモードおよび時間設定が切り替わり、設定されたブラッシングモードおよび時間設定のライトが緑色に点灯します。

※ソニックケアーの電源がオンの時は、ブラッシングモードは選択できますが、時間設定はできません。

ブラッシングモード

❸ クリーンモード
歯垢をしっかり落とす通常の歯磨き、初期設定
ブラッシング時間:2分

ボタンを押す

❹ センシティブモード
敏感な歯と歯ぐきをやさしく、しかもしっかりと磨きたいとき
ブラッシング時間:2分

ボタンを押す

❺ マッサージモード
歯ぐきをやさしくマッサージするとき
ブラッシング時間:2分

ボタンを押す

時間設定

❶ Goケアー
手早く磨きたいときに。クリーンモード1分間のブラッシングです。15秒ごとにビープ音が鳴ります。
ブラッシング時間:1分

ボタンを押す

❷ Maxケアー
よりしっかり磨きたいときに。クリーンモード30秒とマッサージモード15秒を4回繰り返します。計3分間のブラッシングです。45秒ごとにビープ音が鳴ります。
ブラッシング時間:3分

本体および充電器のお手入れの仕方

注意 ハンドル、ブラシヘッド、携帯用充電器を食器洗浄機で洗わないでください。

ハンドル

1. ブラシヘッドを外して金属シャフト部をぬるま湯で洗浄してください。
※金属シャフト上のゴム製シールを先の尖ったもので突き刺さないようにしてください。破損が生じるかもしれません。

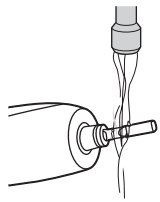

2. ハンドル表面を湿らせた布で全体的にむらなく拭いてください。

ブラシヘッド

1. ご使用のたびにブラシヘッドと毛先を水で洗い自然乾燥させてください。

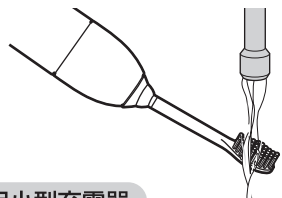

2. ハンドルからブラシヘッドを外して接合部を少なくとも1週間に1回ぬるま湯で洗浄してください。

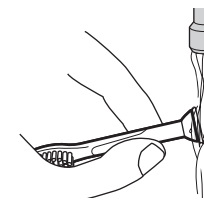

携帯用小型充電器

1. 充電器の電源プラグをコンセントから抜いてください。

2. 湿らせた布で充電器の表面をきれいに掃除してください。

注意 充電器は決して水の中に入れないでください。

注意 お手入れの際、シンナー、ベンジン、アルコール類を使用すると、変色、変形の原因にもなりますので、絶対に使用しないでください。充電器のお掃除の時に、電源コード・プラグを調べてください。もし電源コード・プラグの異常がありましたら、事故防止のため使用を中止し、プラグをコンセントから抜いてソニッケアーコール 0120-418-608 までご相談ください。
余分なコードを収納するのに、充電器底のコード巻き取り部をお使いください。

リチウムイオン電池について

この製品はリチウムイオン電池を使用しています。リチウムイオン電池はリサイクル可能な貴重な資源です。ご使用済みの製品の廃棄に際しては、リチウムイオン電池を取り出し、各自治体の処理方法に従いリサイクルにご協力ください。
※ご不明な場合は、ソニッケアーコール（0120-418-608）までお問い合わせください。

廃棄するとき

Li-ion

⚠注意 ・製品を廃棄するとき以外は、絶対に本体を分解しないでください。
・一度分解したハンドルは安全上の理由から、絶対に再使用しないでください。

充電池の取り外し方

・必ず1～4の手順に従って作業を行ってください。
・充電池を取り外す前にマイナスドライバーをご使用ください。
作業を行う際は目、手、指などをけがされないように、また本体を傷つけないように注意してください。

1. ハンドルを充電器から取り出し、スイッチを“ON”にして完全に動作しなくなるまで電池を放電させてください。何度もこのステップを繰り返して完全に動作しなくなったことをご確認ください。

2. ハンドルの底にあるスロットにドライバーの先を入れてください。ドライバーを反時計回りに回し、ボトムキャップを外してください。

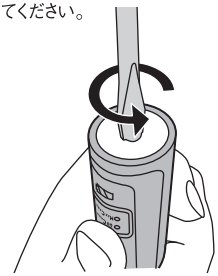

3. ハンドルの上下を逆さにし、シャフトを下に押して、ハンドルの内心を外に出してください。

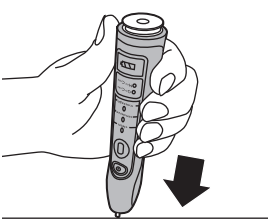

4. 充電池の端のあたりで回路基盤の下にドライバーの先を入れてドライバーをひねり、充電池と回路基盤の接続を壊してください。回路基盤を取り除き、ドライバーを使って充電池を完全に取り外してください。

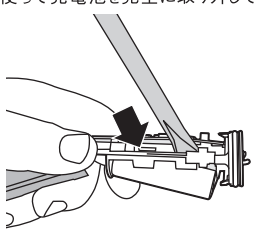

故障かな?と思ったら

故障かな?と思ったら
お調べください

歯にブラシヘッドを強く押し当てると動作が弱くなる。

●ブラシヘッドを押し当てすぎると、ブラシの振幅が小さくなります。
ブラシヘッドは歯に軽く当てるようにしてください。

ブラッシングの力が弱く感じる。

●イージースタート機能が働いている可能性があります。
詳しくはP9をご覧ください。
●充電が不十分な場合もありますので、24時間以上充電されているかどうか再度ご確認ください。
●ブラシヘッドが3カ月に一度交換されているかどうかご確認ください。

使い始めてから2分程度でブラシヘッドの動作がとまる。

●スマートタイマー機能により、電源スイッチを入れてから2分経過すると自動的に動作がとまります。詳しくはP9をご覧下さい。
●時間設定により1分（Goケアー）、3分（Maxケアー）のブラッシング時間の設定も可能です。詳しくはP14をご確認ください。

充電しても数分しか使えない。

●ハンドルの底が充電器の充電部に接触するようにまっすぐ立ててください。
●充電時間が短い可能性があります。充電池を活性化するために24時間以上充電してください。

故障かな?と思ったら

変なにおいがする。

●ハンドル、ブラシヘッド、充電器をお手入れしてください。
詳しくはP15をご覧ください。

作動しない。

●充電池を活性化するために24時間以上充電してください。
●電源にプラグがきちんとささっていることを確認してください。
●場合によっては、ブラシヘッドを再度装着、あるいは交換する必要があるかもしれません。

動作がおかしい(例:動きにムラがある、ブラッシング中にブラッシング力が弱くなった)。

●充電池を活性化するために24時間以上充電してください。
●Maxケアーの設定になっているかもしれません。この場合、3分間のブラッシング時間の間、クリーンモード及びマッサージモードが交互に作動します。
クリーンモードもしくはマッサージモードは異なる音を出し、異なるブラッシングの動きをします。

ブラシヘッドが歯にあたる時にガタガタ音がする。

●ブラシを少し斜め(45°)にあててください。詳しくはP13をご覧ください。

ブラッシング中にパーソナルブラッシングボタンが動かない。

●時間設定を選んでいる可能性があります。この場合、パーソナルブラッシングボタンは機能しません。詳しくはP14をご覧ください。

＊ 以上の処置により、正常な状態に戻らない場合は、
ソニッケアーコール(0120-418-608)にお問い合わせください。

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USE

Read this user manual carefully before you use the appliance and save it for future reference.

DANGERS

To reduce the risk of electrocution:

1. Do not place or store product where it can fall or be pulled into a tub or sink.
2. Do not place in or drop into water or other liquid.
3. Do not reach for a product that has fallen into water. Unplug immediately.
4. Do not use while bathing.

WARNINGS

To reduce the risk of burns, electrocution fire or injury to persons:

1. DO NOT plug into an outlet with a voltage other than specified on the bottom of the charger. This product is designed to operate within a range of 100 to 240 volts. Voltage converters DO NOT guarantee voltage compatibility.
2. Never force the plug into an outlet; if it does not easily fit into the outlet, discontinue use.
3. Discontinue use if this product appears damaged in any way (brush head, handle, charger). This product contains no serviceable parts. Refer to chapter 'Guarantee and service' if your Sonicare no longer works properly or needs repair.
4. Never use the charger if it has a damaged cord or plug.
5. Keep cord away from heated surfaces.
6. Do not use the charger outdoors.
7. Do not use the charger if dropped into water.
8. Avoid using a brush head with crushed or bent bristles. Damaged bristles may break off while brushing. Replace the brush head with a new one every 3 months or sooner if signs of wear appear. Inappropriate cleaning may cause bristle damage. (See chapter 'Cleaning')
9. This product is designed to clean your teeth, gums and tongue only. Use this product only for its intended use as described in this booklet. Discontinue use of this product and contact a physician/dentist if discomfort or pain is experienced.
10. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
11. Children should be supervised to ensure that they do not play with the appliance.
12. Sonicare is a personal care device and is not intended for use on multiple patients in a dental office or institution.
13. Do not use attachments other than those recommended by the manufacturer.

14. If your toothpaste includes peroxide, baking soda or other bicarbonate (common in whitening toothpastes), thoroughly clean your brush head and handle with soap and water after each use. Otherwise plastic cracking may occur.
15. To avoid damage to the product, do not place the brush head, handle, charger or charger cover in the dishwasher for cleaning.

MEDICAL WARNINGS

1 Consult your dental professional before you use this product if you have had oral or gum surgery in the previous 2 months.
2 Contact your dental professional if excessive bleeding occurs after using this product, or bleeding continues to occur after 1 week of use.
3 If you have a pacemaker or other implanted device, contact your physician or the device manufacturer prior to use.
4 Sonicare has been tested and is compliant with safety standards for electromagnetic devices.
5 Consult your physician prior to using the Sonicare if you have medical concerns.

SAVE THESE INSTRUCTIONS

Your Sonicare (Fig. 1)

Ⓐ Hygienic travel cap
Ⓑ Brush head
Ⓒ Interchangeable color code ring
Ⓓ Handle with soft grip
Ⓔ Power on/off button
Ⓕ Personalized brushing button
Ⓖ Brushing modes
Ⓗ Brushing routines
Ⓘ Deluxe recharge gauge
Ⓘ Deluxe charger
Ⓚ Charger cover with brush head holder (select models)
Ⓛ Travel charger
Ⓜ Charger base with cord wrap (select models)

Getting Started

Changing the color code ring

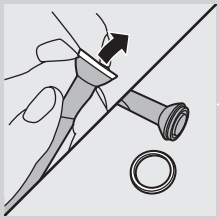

Sonicare brush heads come with interchangeable color code rings to help identify your brush head.
To change the color code ring:

1 Pull the color code ring from the bottom of the brush head.

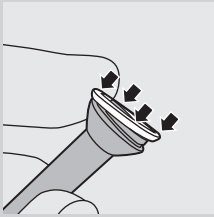

2 Install a new ring by slipping one edge of the new ring over the bottom of the brush head. Then press down on the other side to snap the ring in place.

Attaching the brush head

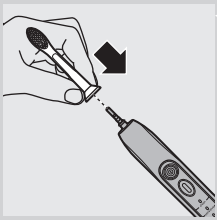

1 Align the brush head so the bristles face the front of the handle.

2 Firmly press the brush head down on the metal shaft until it stops.
Note: There is a small gap between the color code ring and the handle.

Charging your Sonicare

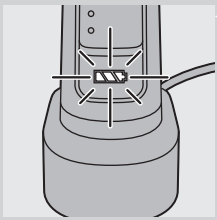

1 Plug the charger into a live outlet.

2 Place the handle on the charger.

- The flashing light on the battery gauge indicates that the toothbrush is charging.

Deluxe recharge gauge:
Indicates amount of charge left in battery
- 3 green LEDs: 75-100%
- 2 green LEDs: 50-74%
- 1 green LED: 25-49%
- 1 flashing yellow LED: less than 25%

Note: If the battery charge of your Sonicare is low, you hear 3 beeps and 1 LED on the recharge gauge flashes yellow for 30 seconds after the 2-minute brushing cycle.

Note: It takes at least 24 hours to fully charge the battery. A fully charged Sonicare can hold a charge for about 2 weeks of brushing (two 2-minute brushings a day) without being placed on the charger.

Note: Number brushings from a fully charged handle will diminish as the battery ages over time.

Using your Sonicare

Brushing instructions

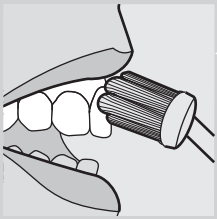

1 Wet the bristles and apply a small amount of toothpaste.

2 Place the toothbrush bristles against the teeth at a slight angle towards the gumline.

3 Press the power on/off button to turn on the Sonicare.

4 Apply light pressure to maximize Sonicare's effectiveness and let the Sonicare toothbrush do the brushing for you.

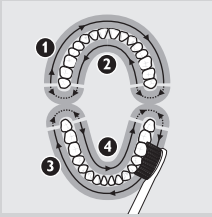

5 Gently move the brush head slowly across the teeth in a small back and forth motion so the longer bristles reach between your teeth. Continue this motion throughout your brushing cycle.

Note: To make sure you brush evenly throughout the mouth, divide your mouth into 4 sections using the Quadpacer feature (see 'Features' section)

6 Begin brushing in section 1 (outside top teeth) and brush for 30 seconds before moving to section 2 (inside top teeth). Continue brushing in section 3 (outside bottom teeth) and brush for 30 seconds before moving to section 4 (inside bottom teeth).

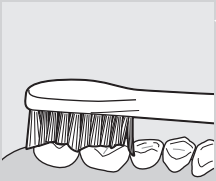

7 After you have completed the brushing cycle, you can spend additional time brushing the chewing surfaces of your teeth and areas where staining occurs. You may also brush your tongue, with the toothbrush turned on or off, as you prefer.

Your Sonicare is safe to use on:
Braces (brush heads wear out sooner when used on braces)
Dental restorations (fillings, crowns, veneers)

Personalizing your brushing experience

Sonicare automatically starts in the default Clean mode. To personalize your brushing:

1 Prior to turning on the Sonicare, press the Personalized Brushing button to toggle between modes and routines.
- The green LED indicates selected mode or routine.

Note: When the toothbrush is turned on, you can switch between modes but not between routines. Routines should be selected prior to brushing.

Brushing modes

Clean mode
Standard mode for superior teeth cleaning.

Sensitive mode
Gentle, yet thorough cleaning for sensitive gums and teeth.

Massage mode
Gentle gum stimulation.

Brushing routines

Go Care routine
1-minute brushing cycle in the Clean mode, for a quick clean. You hear the Quadpacer signal at 15-second intervals.

Max Care routine
3-minute brushing cycle that combines the Clean and Massage modes in one routine for a thorough mouth clean. There are 30 seconds of Clean mode and 15 seconds of Massage mode for each of the 4 sections of your mouth. You will hear the Quadpacer signal at 45 second intervals.

Note: When Sonicare is used in clinical studies, the default 2-minute Clean mode must be selected. The handle should be fully charged. Deactivate the Easy-start feature and for areas where excess staining occurs, an additional 30 seconds of brushing time can be spent to assist with stain removal.

Features

Easy-start

- This Sonicare model comes with the Easy-start feature activated.
- The Easy-start feature gently increases power over the first 14 brushings to ease into the Sonicare experience.

Note: Each of the first 14 brushings must be at least 1 minute in length to properly move through the Easy-start ramp-up cycle.

Deactivating or activating the Easy-start feature

1 Attach your brush head to the handle.

2 Place the handle in the plugged-in charger.
- To deactivate Easy-start:
Press and hold the power button for 5 seconds. You hear 1 beep to indicate that the Easy-start feature has been deactivated.
- To activate Easy-start:
Press and hold the power button for 5 seconds. You hear 2 beeps to indicate that the Easy-start feature has been activated.

Note: Using the Easy-start feature beyond the initial ramp-up period is not recommended and reduces Sonicare's effectiveness in removing plaque.

Smartimer

The Smartimer indicates that your brushing cycle is complete by automatically turning off the toothbrush at the end of the brushing cycle. Dental professionals recommend brushing no less than 2 minutes twice a day.

Quadpacer

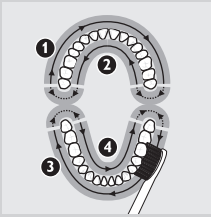

- The Quadpacer is an interval timer that has a short beep and pause to remind you to brush the 4 sections of your mouth. Depending on the brushing mode or brushing routine you have selected, the Quadpacer beeps at different intervals during the brushing cycle. See the "Brushing instructions" and "Personalizing your brushing experience" sections.

The Quadpacer feature on this model has been activated. To deactivate or reactivate the Quadpacer feature:

1 Place the handle with a brush head attached in the plugged-in charger.

2 To deactivate Quadpacer: Press and hold the Personalized brushing button for 5 seconds. You hear 1 beep to indicate the Quadpacer has been deactivated.

◗ To reactivate Quadpacer: Press and hold the Personalized brushing button for 5 seconds until you hear 2 beeps. This indicates that the Quadpacer feature is active again.

Note: The Quadpacer feature cannot be deactivated on the pre-programmed Go Care and Max Care brushing routines.

Cord wrap on deluxe charger (select models)

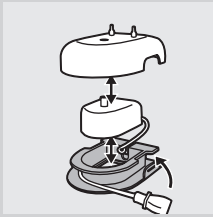

If your model includes the deluxe charger cover and base, the travel charger is pre-installed inside the cover. If you want to shorten the power cord, you can store excess cord in the cord wrap feature built into the charger base.

1 To separate the charger cover from the charger base, press the two gray snap bars on the charger base and pull the white charger cover upwards.

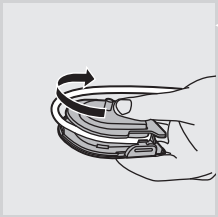

2 Wrap any excess power cord around the gray charger base as shown in the picture. Be sure to wrap the cord on the inside of the two snap levers.

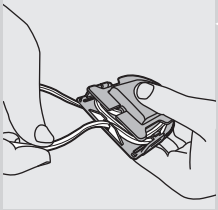

3 When you have stored the excess cord, guide the power cord through the small groove in the rear of the gray charger base.

4 Reattach the charger cover by pressing it down over the charger base until it snaps into place.

Tip: For extra convenience during travel, you can remove the travel charger and use it without the charger cover and charger base.

Cleaning

Do not clean handle, brush heads, and the travel charger, in a dishwasher.

Toothbrush handle

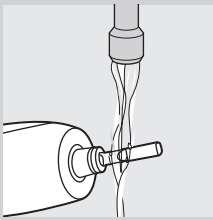

1 Remove the brush head and rinse the metal shaft area with warm water.

Do not push on the rubber seal on the metal shaft with sharp objects, as this may cause damage.

2 Use a damp cloth to wipe the entire surface of the handle.

Brush head

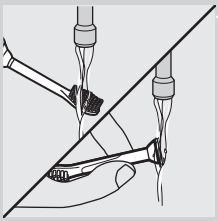

1 Rinse the brush head and bristles after each use.

2 Remove the brush head from the handle and rinse the brush head connection at least once a week with warm water.

Charger

1 Unplug the charger.

2 Use a damp cloth to wipe the surface of the charger.

Replacement

Brush head

- Replace Sonicare brush heads every 3 months to achieve optimal results.
- Use only Sonicare ProResults replacement brush heads.

Disposal

- The rechargeable battery inside your Sonicare cannot be replaced, but is easy to remove for recycling. At the end of product life and prior to disposal, please remove the rechargeable battery from the handle by following the instructions below.
- Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Removing the rechargeable battery

Please note that this process is not reversible.

- To remove the rechargeable battery, you need a flat-head (standard) screwdriver. Observe basic safety precautions when you follow the procedure outlined below. Be sure to protect your eyes, hands, fingers, and the surface on which you work.

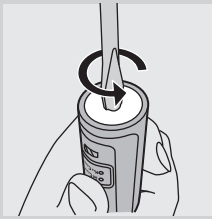

1 To deplete the rechargeable battery of any charge, remove the handle from the charger, turn on the Sonicare and let it run until it stops. Repeat this step until you can no longer switch on the Sonicare.

2 Insert a screwdriver into the slot located at the bottom of the handle and turn counterclockwise to release the bottom cap.

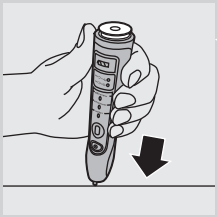

3 Hold the handle upside down and push down on the shaft to release the internal components of the handle.

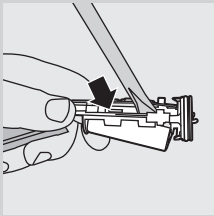

4 Insert the screwdriver under the circuit board, next to the battery connections, and twist to break the connections. Remove the circuit board and pry the battery from the plastic carrier.

The rechargeable battery can now be recycled and the rest of the product discarded appropriately.

Guarantee and Service

If you have any questions after reading this manual, feel free to contact our Customer Service Center or visit our website. Customer Service Center 1-800-682-7664 (North America), outside North America contact your local Philips Customer Care Center. Internet information: www.sonicare com (North America) or www.philips com (outside North America) See separate Philips worldwide guarantee leaflet for standard guarantee. In Japan, you can contact the Sonicare Customer Care Center at 0120-418-608 (Japanese language enquiries only).

WARRANTY EXCLUSIONS

What is not covered under warranty:

- Brush heads
- Damage caused by misuse, abuse, neglect, alterations or unauthorized repair.
- Normal wear and tear, including chips, scratches, abrasions, discoloration or fading.

IMPLIED WARRANTIES

ANY IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTIES SET FORTH IN THE PHILIPS WORLDWIDE GUARANTEE LEAFLET. SOME STATES DO NOT ALLOW LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

LIMITATION OF REMEDIES

IN NO EVENT SHALL PHILIPS OR ANY OF ITS AFFILIATED OR SUBSIDIARY COMPANIES BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES BASED UPON BREACH OF WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, TORT, OR ANY OTHER LEGAL THEORY. SUCH DAMAGES INCLUDE, WITHOUT LIMITATION, LOSS OF SAVINGS OR REVENUE; LOSS OF PROFIT; LOSS OF USE; THE CLAIMS OF THIRD PARTIES NCLUDING, WITHOUT LIMITATION, DENTISTS AND DENTAL HYGIENISTS; AND COST OF ANY SUBSTITUTE EQUIPMENT OR SERVICES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR EXCLUSION MAY NOT APPLY TO YOU.

Frequently Asked Questions

This chapter lists the questions most frequently asked about the appliance. If you cannot find the answer to your question, contact the Customer Care Center in your country.

Question	Answer
Why doesn't the Sonicare toothbrush work?	You may need to recharge the Sonicare. Charge the Sonicare for at least 24 hours.
	Make sure that your Sonicare charger is plugged into a live electrical outlet and not into an outlet controlled by a light switch.
	You may need to reattach or replace the brush head.
Why do I feel a tickling sensation when I use Sonicare?	You may experience a slight tickling/tingling sensation when you use Sonicare for the first time. As you become accustomed to brushing with Sonicare, this sensation diminishes.
The brush head chatters against my teeth. What can I do about this?	To avoid this, keep the brush head properly oriented, with the bristles placed on the gumline at a slight angle.
Why does the toothbrush seem less powerful?	You may need to charge the Sonicare.
	The Easy-start feature may be on. Deactivate the Easy-start feature (See 'Features' section).
	You may need to replace your brush head.
Why doesn't the personalized brushing button work during brushing?	You may have selected a brushing routine. If this is the case, the Personalized brushing button is not active (See 'Using your Sonicare' section).
Why does the toothbrush seem to lose power during brushing?	You may be in the Max Care brushing routine. If this is the case, the routine alternates between the Clean and Massage modes throughout the 3-minute brushing cycle. The Clean and Massage modes have a different sound and brush movement.
Do I need a special charger if I travel with my Sonicare?	Travel tip: the Sonicare charger can be used with common worldwide voltages between 100-240V AC, at either 50 or 60Hz. A simple plug adapter is all that is required.

保証書と修理サービスについて (必ずお読みください)

保証と
アフターサービス

〈保証書･最終ページに付属〉

●下記の保証は、本製品を最初に購入された方のみ適用されます。

●保証書は、必ず「お買い上げ日･販売歯科医院名」等の記入をお確かめのうえ、販売歯科医院から受け取っていただき内容をよくお読みのあと大切に保管してください。

保証期間……お買上げ日から2年間

【ご不明な点や修理に関するご相談は】

●修理に関するご相談ならびにご不明な点は、ソニッケアーコール（0120-418-608 以下省略）にお問い合わせください。

【修理を依頼されるときは】

●修理をご依頼されるまえに、この取扱説明書をよくお読みいただき、再度点検のうえ、尚、異常のあるときはご使用を中止し、ソニッケアーコールへご依頼ください。

【保証期間中は】

●修理に際しましては保証書をご提示ください。

●保証書の規定に従って修理させていただきます。

【保証期間が過ぎているときは】

●ソニッケアーコールにご相談ください。修理によって機能が維持できる場合は、ご希望により有料で修理させていただきます。

【海外での本製品の保証及びアフターサービスについて】

●本製品の保証は海外においても有効です。

●日本国以外のフィリップスサービス部門においても保証期間内及び保証期間の経過後のアフターサービスを受けることができますが、この場合多少日数を要することもあります。

●海外にてアフターサービスを受けられる場合は、現地のフィリップスサービス部門にお問い合わせください。

便　利　メ　モ

お買い上げ日	年　月　日	お買い上げ店名	TEL.（　　）

ご使用の時このような症状はありませんか？

●本体にさわると時々電気を感じる。
●こげくさい臭いがする。
●電源コード部を動かすと通電したり、しなかったりする。
●その他の異常、故障がある。

このような症状の時は、故障や事故防止のため、スイッチを切り、電源プラグをコンセントからはずして、必ずソニッケアーコールにご相談ください。

仕　　様

品　　名	音波式電動歯ブラシ
形　　名	FlexCare 900シリーズ
定格電圧	AC100V-240V、50-60Hz
ブラシ振動数	約31,000ストローク/分
充電時間	約24時間
使用時間	完全充電後、通常使用 （2分間のブラッシングを1日2回）で約2週間
使用充電池	リチウムイオン電池（Li-ion）
消費電力	携帯用充電器0.35-1.5W（充電時）

満充電したソニッケアーのブラッシング回数は、時間経過による充電池の劣化に伴い減少します。

● ブラシヘッド ●

最良のブラッシング効果を得るため、ブラシヘッドは3ヶ月に1回交換してください。
破損の兆候が見えた場合は、速やかにお取り換えください。
ソニッケアー FlexCare 900シリーズのブラシヘッドは、FlexCare 900シリーズ専用のものをお使い下さい。

●ソニッケアーの修理受付は、ソニッケアーコールが承ります。
●修理サービス等についておわかりにならないことは、下記にお問い合わせください。

ソニッケアーコール
（祝日を除く月~金10:00~18:00）
0120-418-608

ホームページアドレス www.sonicare.jp

製造元
Philips Oral Healthcare, Inc.
35301 SE Center Street
Snoqualmie WA 98065 U.S.A.

日本販売代理店
株式会社ヨシダ
〒110-8507 東京都台東区上野7-6-9

無料修理規定

〈無料修理規定〉

1.保証期間内に取扱説明書、本体貼付ラベル等の注意書に従った正常な使用状態で故障した場合には、無料修理します（ブラシは除く）。

2.保証期間内に故障して無料修理をお受けになる場合には、ソニッケアーコール（0120-418-608、以下省略）にご依頼ください。

3.保証期間内でも次の場合には有料修理になります。

①使用上の誤り及び不当な修理や改造による故障及び損傷。
②お買い上げ後の輸送、移動、落下等による故障及び損傷。
③火災、地震、水害、落雷、その他の天災地変、公害や異常電圧による故障及び損傷。
④一般家庭以外（例えば、業務用の長時間使用）に使用された場合の故障及び損傷。
⑤本書の提示がない場合。
⑥本書にお買い上げ年月日、お客様名、販売歯科医院名の記入のない場合、或は字句を書き換えられた場合。

4.本保証書は再発行いたしませんので大切に保管してください。

修理メモ

＊この保証書は、本書に明示した期間、条件のもとにおいて無料修理をお約束するものです。従ってこの保証書によってお客様の法律上の権利を制限するものでは　ありません。保証期間経過後の修理についてご不明の場合は、ソニッケアーコールにお問い合わせください。

ソニッケアー 保証書 持込修理

CERTIFICATE OF PURCHASE

この保証書は、本書記載内容で無料修理を行うことをお約束するものです。
お買い上げの日から下記期間中に故障が発生した場合は、本書をご確認のうえ、
ソニッケアーコールに修理をご依頼ください。

品　　名	音波式電動歯ブラシ
形　　名	FlexCare 900シリーズ
保証期間	お買い上げ日より2年
対象部分	ハンドル、携帯用充電器、(ブラシは除く)
お買い上げ日	年　　月　　日
お客様	ご住所　〒
	ご芳名
	電話番号
★販売歯科医院	歯科医院名・住所・電話番号

★ ご販売歯科医院様へ
この保証書はお客様へのアフターサービスの実施と責任を明確にするものです。
贈答品、記念品の場合も含めて必ず記入捺印してお客様にお渡しください。

お問い合わせ　修理のご依頼は

ソニッケアーコール
(祝日を除く月～金10:00～18:00)
0120-418-608

日本販売代理店
株式会社 ヨシダ

この印刷物は再生紙を使用しております。 100% recycled paper 4235.020.31271

©2008 Koninklijke Philips Electronics NV (KPENV). All rights reserved. PHILIPS and the Philips shield are registered trademarks of KPENV. Quadpacer and Sonicare are trademarks of Philips Oral Healthcare, Inc. and/or KPENV.